

1 Product accessories











90 degree extension sleeve

Part 1: 5.5-8.5mn

Copper foil paper

2 2.1 Insert the network cable into the nut from the end



2.2 Peel off the cover of the 1.2 inch network cable




2.3





2.4 Wrap a layer of copper foil

Copper foil paper

3 Fan out all four twisted pairs, following the color coding label and allocate each conductor into proper slots on wiring cap. Trim the ends of conductors.

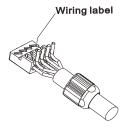







4 Tear off excess stickers along the dotted line.





5 Place wiring cap on plug.





7-1 Close the plug cover, make sure the power cord makes proper contact with the ground clip on the plug, and tighten the nut.





7-2 Close the plug cover, make sure the power cord makes proper contact with the ground clip on the plug, then close 90 degree extending sleeve and tighten the nut.





